REMINGTON®

EST. NEW YORK 1937

R1 Style Series Rotary Shaver
R1000

remington-europe.com

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration. You must register within 28 days of purchase.

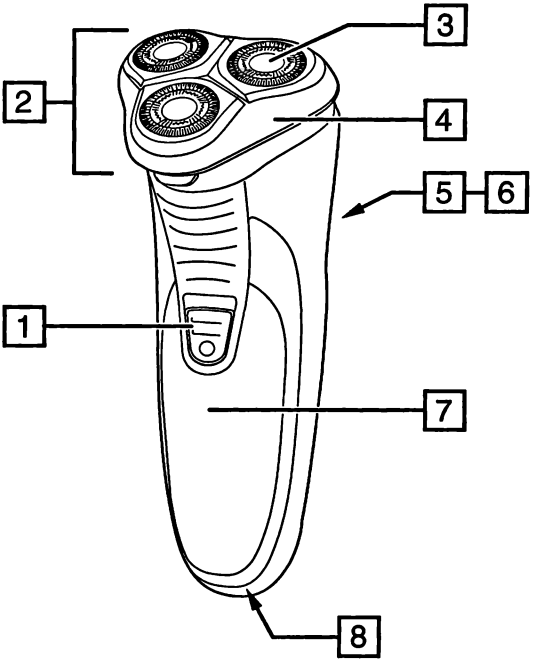
3
2
4
5
6
1
7
8

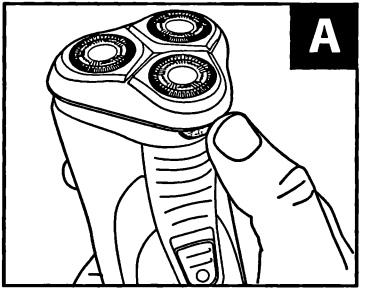
A

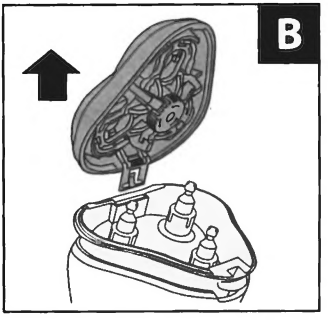
B

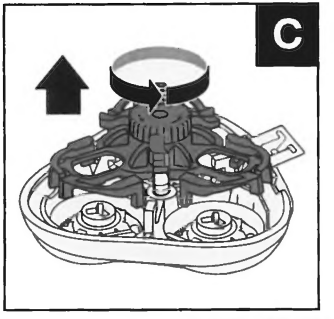
C

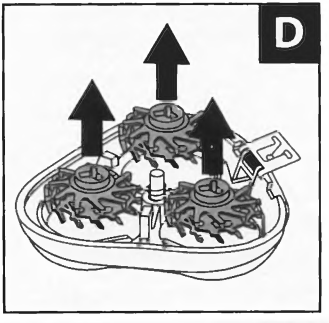
D

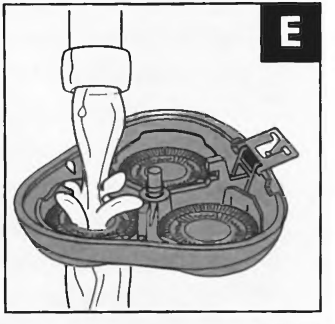
E

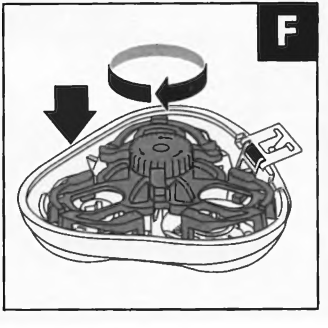
F

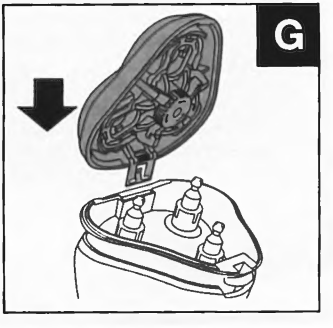
G

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- WARNING: Keep the appliance dry.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- The battery in this device is not replaceable.
- **Do not use the appliance if it is damaged or malfunctions.**
- **Do not use attachments other than those we supply.**
- **This appliance should never be left unattended when plugged into a power outlet, except when charging.**
- **Keep the power plug and cord away from heated surfaces.**
- **Do not plug or unplug the appliance with wet hands.**
- **Do not twist or kink the cable, or wrap it round the appliance.**
- **This appliance is not intended for commercial or salon use.**

PARTS

1. On/off switch
2. Head and Cutter assembly
3. Flexing heads
4. Hairpocket
5. Detail trimmer
6. Trimmer release button
7. Charging indicator light
8. Power connector

Not shown

- USB charging cable
- Cleaning brush
- Head guard

GETTING STARTED

CHARGING

- It is recommended to fully charge your appliance before using it for the first time.
- Ensure the product is switched off.
- Connect the product to the USB cable and then connect the USB end of the cable to a powered USB port.

CHARGING INDICATOR LIGHT

Light	Status
Flashing	Shaver is charging
Continuously on	Shaver fully charged
Flashing rapidly	Shaver battery is low

- Run time from fully charged is up to 30 mins.
- Charge time from empty is 8 hours.
- Do not recharge your product after each use as this will shorten the life of the battery.
- Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.

INSTRUCTIONS FOR USE

SHAVING

1. Slide the power switch to turn on.
2. Stretch the skin with your free hand so the hairs stand upright.
3. Only apply light pressure on the shaving head while shaving (pressing too hard can damage the heads and make them vulnerable to breakage).
4. Use short, circular strokes.

TRIMMING

1. Push the trimmer button to release the detail trimmer.
2. Hold the trimmer at a right angle to your skin.
3. Place the trimmer at desired trim line for a quick, easy professional trim.
4. To retract the trimmer, pull the trimmer button back.

TIPS FOR BEST RESULTS

- Ensure your skin is dry. Always hold the shaver at right angles to the skin so that all three heads are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid damage to the rotary heads.

CARE FOR YOUR SHAVER

- Care for your appliance to ensure a long lasting performance. We recommend you clean your appliance after each use.
- Ensure the appliance is switched off and unplugged from the mains before cleaning.

1. Open the shaver head by pressing the release button.
2. Empty out any hair clippings.
3. Pull the shaver head upwards to remove it from the body.
4. Rotate the circular button in the centre of the retainer counter clockwise to release the retainer. Once released, lift it out of the shaver head. Make a note of the correct orientation of the retainer to make refitting easier.
5. Carefully brush away any hairs from the cutters.
6. For a more thorough cleaning, lift out the three cutters.
7. Wash the shaving head under running water. Allow to dry thoroughly.
8. Carefully refit the three cutters.
9. Refit the retainer. Rotate the button clockwise to lock the retainer in place.
10. Once the shaver head is assembled, align the spring hinge with the slot at the back of the hair pocket and press into place. Close the shaver head.

TRIMMER

Lubricate the teeth of the trimmer every six months with a drop of sewing machine oil.

REMOVING THE RECHARGEABLE BATTERY

This appliance contains batteries that are non-replaceable. When the battery is at the end of its life, the appliance and battery must be properly disposed of at an official recycling point.
We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The battery must be removed from the appliance before it is scrapped.
- Disconnect the charging adapter before removing the battery.
- Be aware of the risk of terminals of the battery-operated appliance or battery being short circuited by metal objects.

1. Ensure that the battery is fully discharged. To do this, operate the device until it stops.
2. Use a small flat screwdriver to pry away the front panel.
3. Unscrew 2 screws from the front housing.
4. Pry off the front housing and expose the batteries.
5. Take out the battery assembly and cut the two wires on the end of the battery.

- Used batteries must be removed from the appliance and disposed of at an appropriate official recycling/collection point.
- Do not attempt to operate the device once you have opened it.

RECYCLING

To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.
This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.
To claim an extra 1 year guarantee, register your product online within 28 days of purchase.
Register at: **https://uk.remington-europe.com/product-registration**
Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.
*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM
☎ 0800 212 438 (free call mainland UK)
Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK
www.remington.co.uk
Product support:
productsupport@remington.co.uk

IRELAND
☎ 142 951 40
Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12
https://ie.remington-europe.com
Product support:
productsupport@remington.co.uk

REMINGTON

EST. NEW YORK 1937

T22-7003186